



Inflatable Dome Gazebo


INSTALLATION STEPS

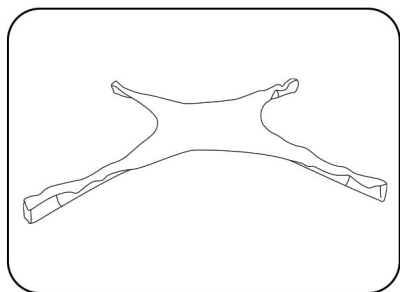


1、 Lay the tent flat on the ground

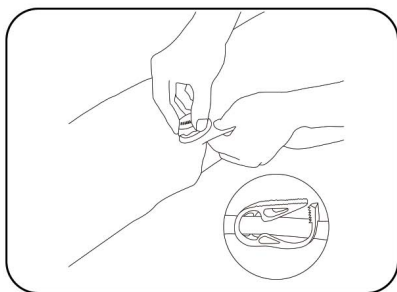


2、 Make sure all the valves are tightened, and open Robert clamp

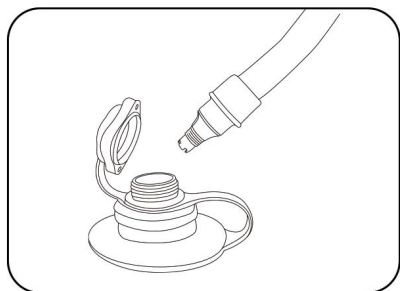


3、 Inflate through input valve

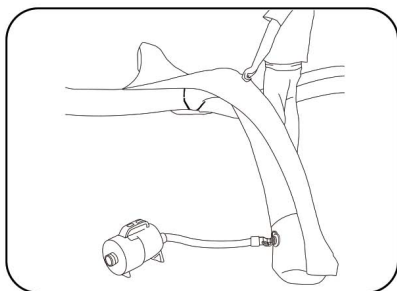

4、 Straighten out and support the tent up during inflating


 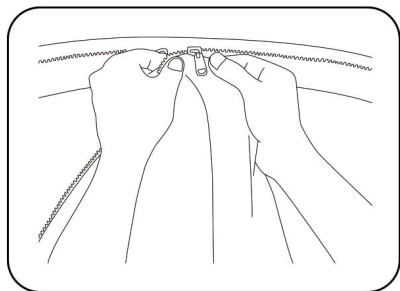




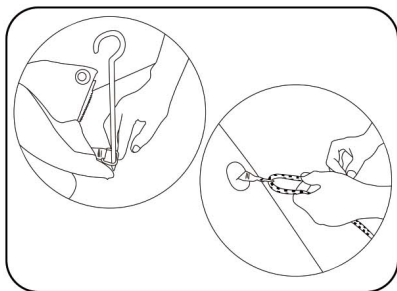




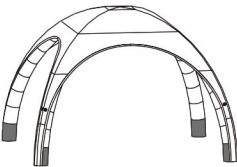
 


 

5、 After filling an appropriate amount of gas, close the input valve cover and Robert clamp, and install walls


 
 


6、 Fasten spikes and ropes, and finish the installation

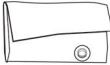SPARE PARTS LIST

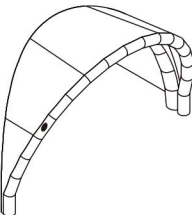

		10 × 325mm	× 20		Input valve	× 1
		Spike bag	× 2		Safety valve	× 1
		Spike rope	× 8		Repair tape	× 3
		Webbing rope	× 2		Repair bladder	× 1

		10 × 325mm	× 6
		Spike bag	× 1
		Spike rope	× 2
		Awning bar	× 4
		Repair tape	× 1

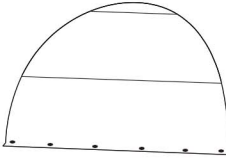		5.3 × 270mm	× 6
		Spike bag	× 1
	<p>Above spare part list is for 3X3m inflatable tent The quantity of spikes for wall should be 8pcs for 4X4m tent, 10pcs for 5X5m tent, 12pcs for 6X6m tent</p>		


Inflatable Dome Gazebo

TEREOGRAM

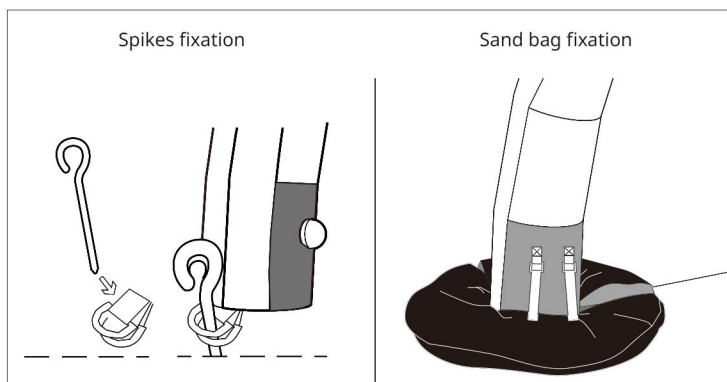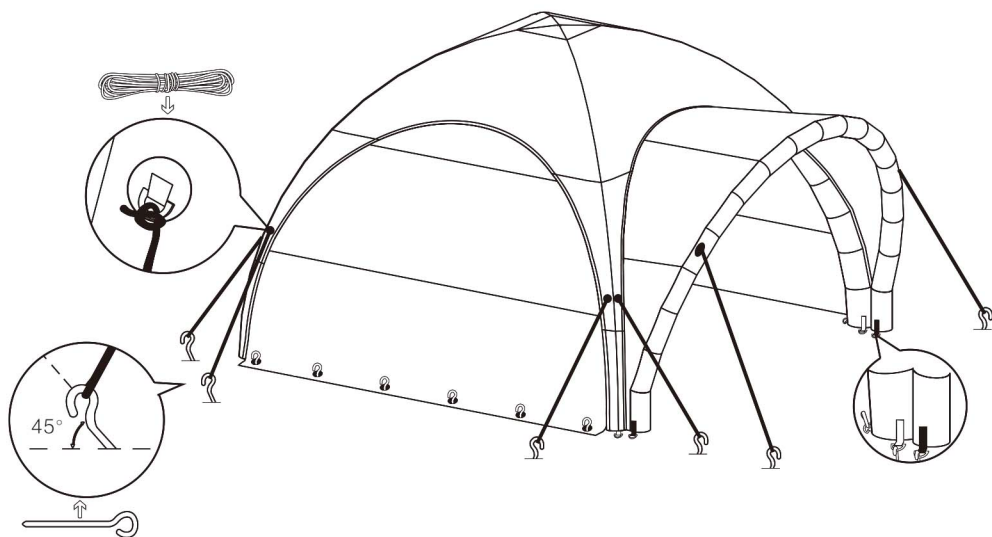

Inflatable Dome Gazebo

VERTICAL VIEW

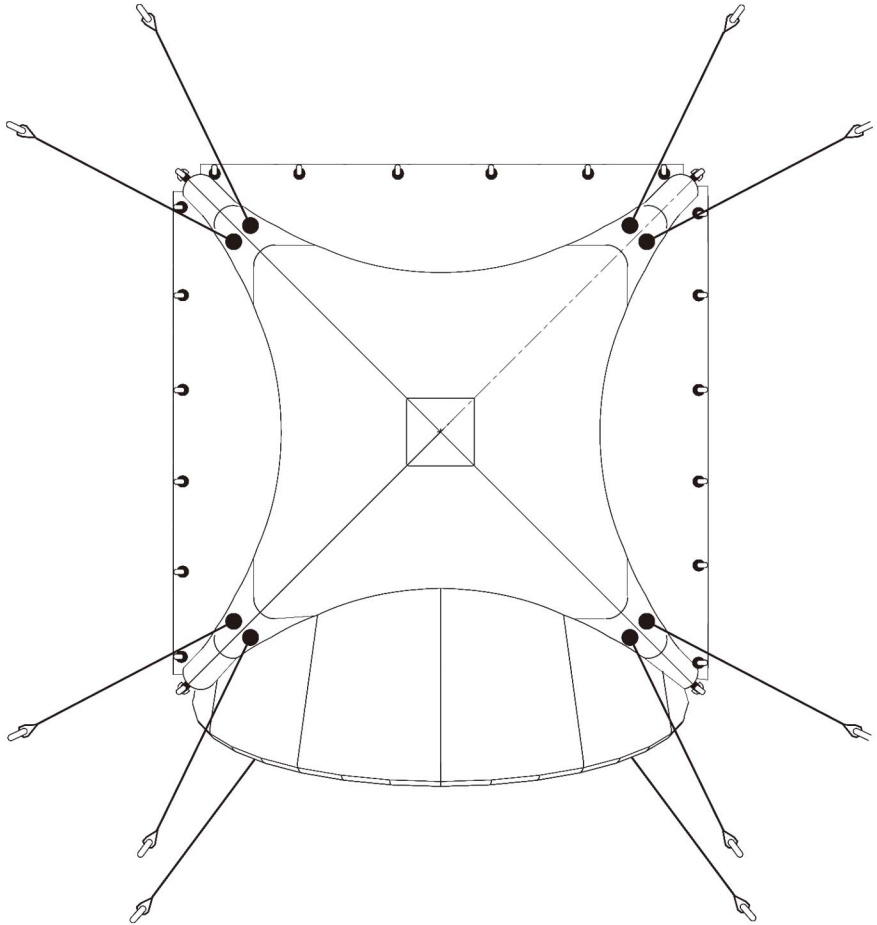

Inflatable Dome Gazebo

Safety Precautions and Guidelines



1. Do a good job in fire prevention and keep away from fire sources at all times
2. Do not open the zipper in leg when inflating
3. The pressure during inflating should not exceed 3.5PSI (please use air pump provided by us)
4. It is forbidden to use sharp edges and sharp hard objects in contact with the canopy or use canopy on uneven ground
5. Buckle, pull lock, door and window shall be opened gently. It is strictly forbidden to pull.
6. Temperature Range: -15°C—40°C
7. It is forbidden to hang objects more than 3kg
8. It is strictly forbidden to contact with acidic substances, such as benzene, ketone and other organic solvents
9. Special personnel should be assigned to carry out regular inspection and maintenance during usage
10. If air leakage or tear, repair it with repair tape. If the damage is serious, please contact us in time
11. Pay attention to the weather changes in time. When the wind force \geq grade 6 (8.0~10.7 m/s), stop using the canopy, and take certain protective measures